


**LOFT PLAN**  
 SCALE: 1/4"=1'-0"




**SCOPE OF WORK**


**42" Plexi-Glass Guard on Loft Rail**  
 - Installed 42" High Plexi-Glass Panels to Existing Railing. Use Panhead Screws and Vinyl or PVC Washers and Spacers Between Plexi-Glass and Wood Railing.  
 Edges of Plexi-Glass Should be Rounded to Removed Sharp Edges.

**MATERIALS**

(3) 4' X 8' Sheets of 1/4"(minimum) Plexi-Glass  
 1 3/4" (minimum) Panhead Wood Screws  
 Vinyl or PVC Washers and Spacers.

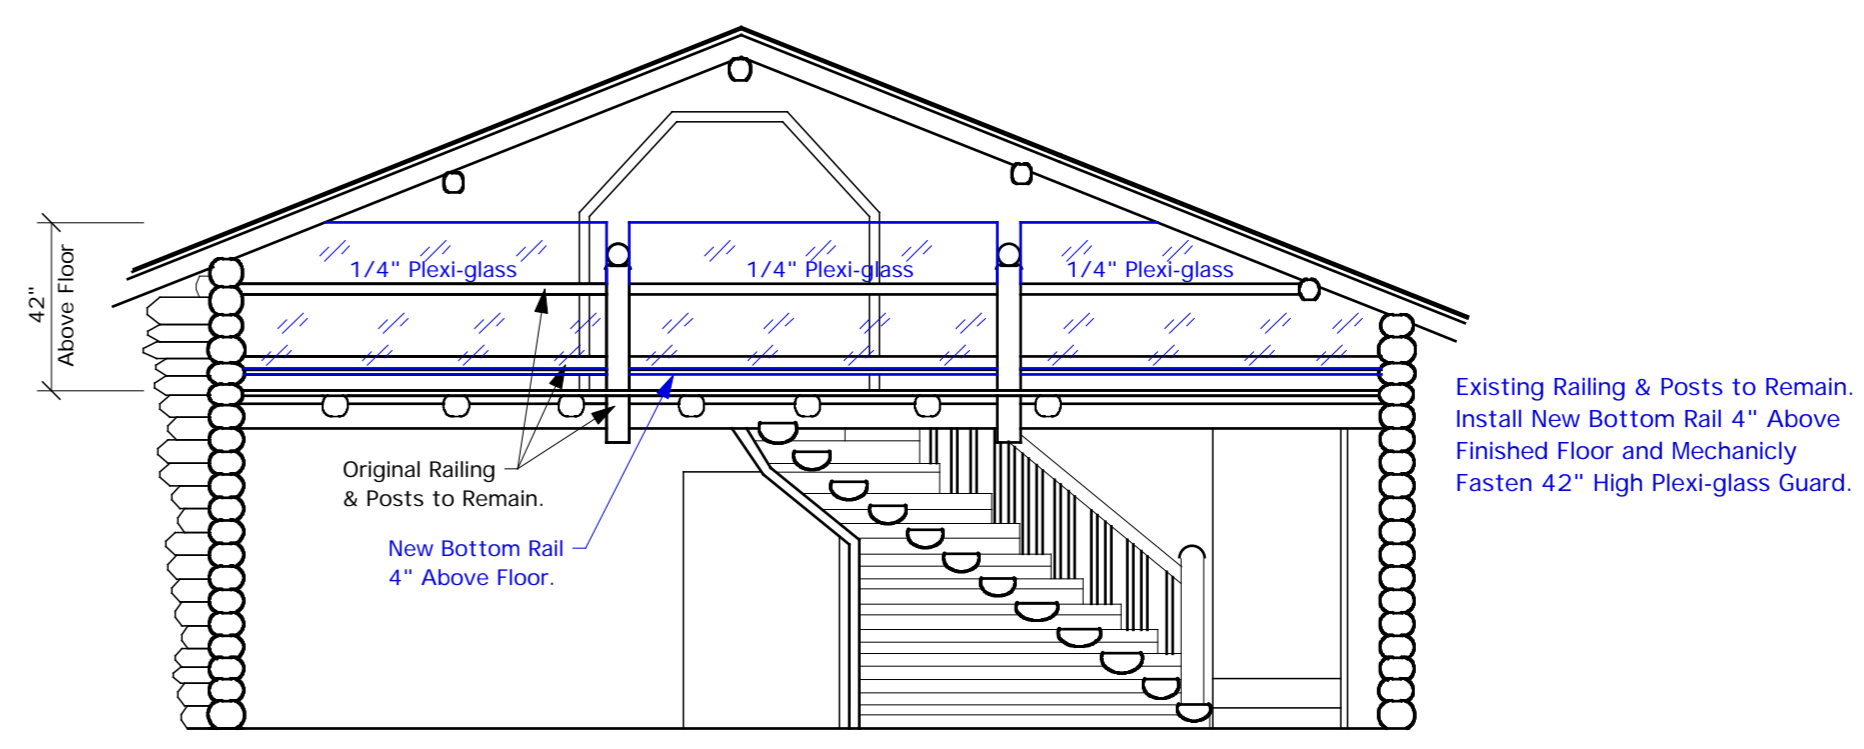

**ELEVATION**  
 SCALE: 1/4"=1'-0"

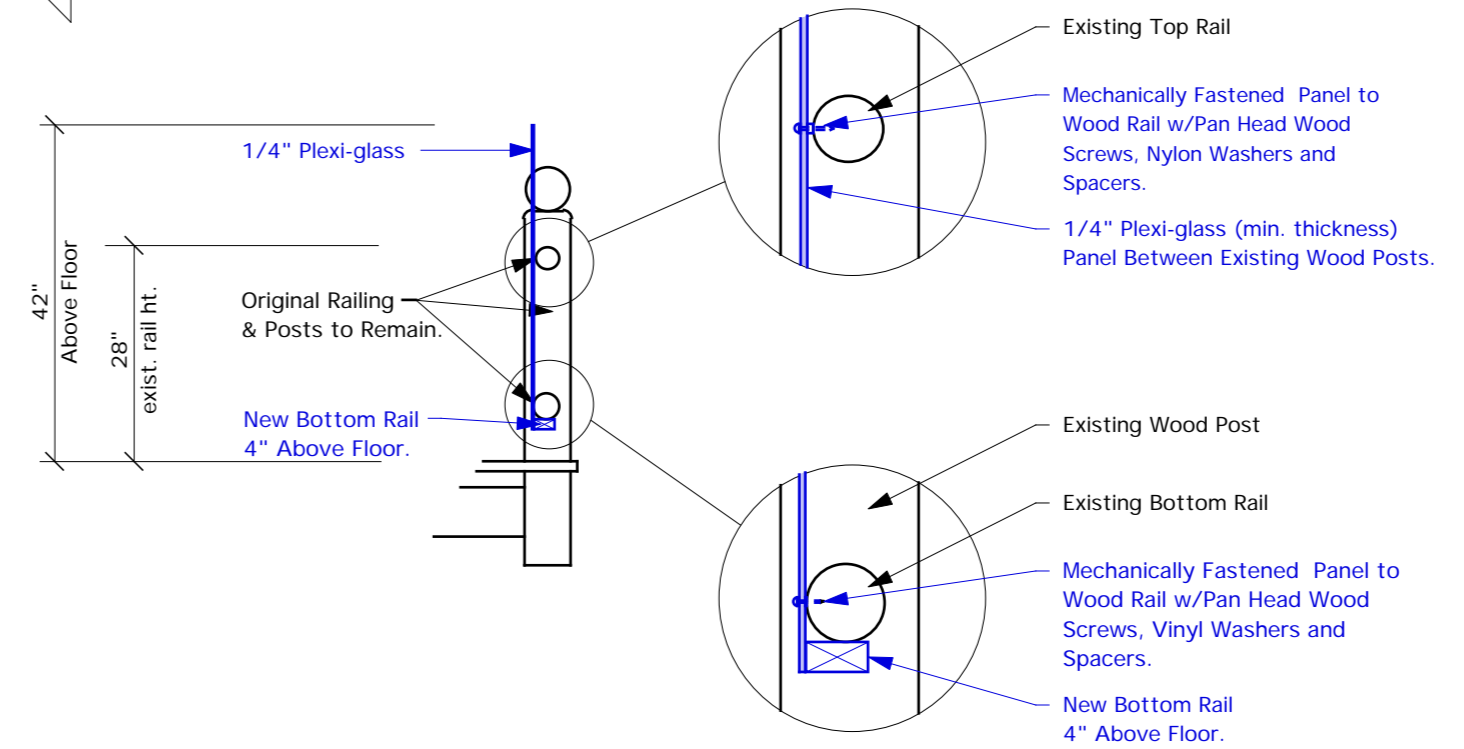

**DETAIL**  
 SCALE: 1/2"=1'-0"

**M.H. WILLEMAN**  
 P.O. BOX 345, MT. GRETTA, PA 17064  
 (717) 864-3323

DATE :5/12/09  
 REVISION DATE:  
 12/02/10  
 6/18/12

SCALE : 1/4" = 1'-0"

File Name: Bordner Cabin

SHEET

**A9**